

## How to reset the Wi-Fi access point on Aduro Hybrid stoves

**Difficulty level:** Easy

**Time consumption:** 10 minutes

**Tools:** TX 20-25

**Components:** Micro SD card with Hybrid Wi-Fi reset program


**NB: All changes and adjustments must be conducted when the stove is cold and disconnected from the power supply.**

If the Wi-Fi (Aduro-XXXXX) is gone, e.g. after resetting the control board, please follow these steps:

- Remove the power cord from the hybrid stove.
- Unscrew the two TX screws and gently extract the control board. Do not remove any cables from the control board.
- Remove the Micro SD card from the SD card adapter:



- Insert the Micro SD card in the Micro SD slot on the control board:

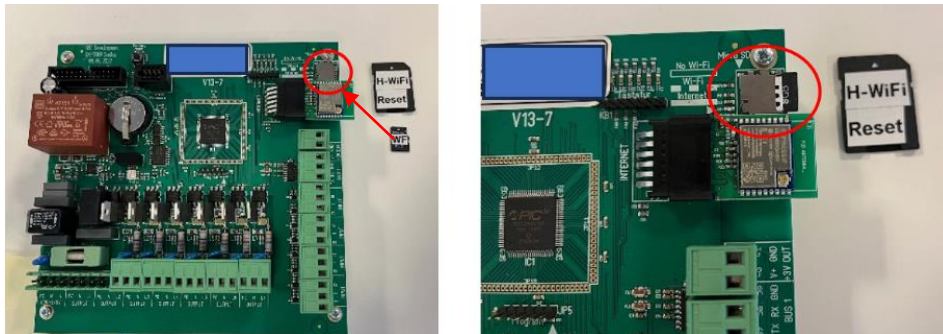

- Connect the power cord and turn the power on. Wait for 30 seconds.
- Turn the power off again and remove the power cord.
- Remove the Micro SD card from the control board.
- Connect the power cord and turn the stove on.
- Check that the stove's Wi-Fi access point (Aduro-XXXXX) is available again under the cellphone's Wi-Fi settings.
- Connect the stove to the router by following this guide: <https://aduro.microsoftcrmportals.com/en-US/knowledgebase/article/KA-01218>