Aduro P2 STOVE PARAMETERS

M8-Technical settings

M8-1 -	factory	settings
--------	---------	----------

01	MAXIMUM TIME FOR IGNITION	min.	18
02	TIME OF FLAME STABILIZATION	min.	4
03	TIME INTERVAL CLEANING THE BRAZIER	min.	60
04	TIME IN ON IN SECONDS OF AUGER'S MOTOR IN IGNITION	sec.	3,8
05	TIME IN ON IN SECONDS OF AUGER'S MOTOR IN FIRE ON PHASE	sec.	4,0
06	TIME IN ON IN SECONDS OF AUGER'S MOTOR AT POWER 1	sec.	3,8
07	TIME IN ON IN SECONDS OF AUGER'S MOTOR AT POWER 5	sec.	8,5
08	SMOKE'S FAN SPEED IN CLEANING	RPM	2500
09	TIME ON IN SECONDS OF AUGER'S MOTOR IN CLEANING	sec.	4,5
10	THRESHOLD OFF	°C	65
11	ALLARM'S DELAY	sec.	30
12	DURATION OF BRAZIER CLEANING	sec.	30
13	MINIMAL THRESHOLD FOR FIRE ON	°C	45
14	MAX THRESHOLD	°C	220
15	FAN THRESHOLD	°C	55
16	SMOKE FAN'S SPEED IN IGNITION	RPM	1350
17	SMOKE FAN'S SPEED IN LAUNCHING PHASE	RPM	1500
18	SMOKE FAN'S SPEED AT POWER 1	RPM	1000
19	SMOKE FAN'S SPEED AT POWER 5	RPM	1650
20	EXCHANGER MOTOR SPEED 1 AT POWER 1	volt	**
21	EXCHANGER MOTOR SPEED 1 AT POWER 5	volt	**
22	ENCODER ENABLING	on/off	on

M8-2 - VARIOUS CALIBRATIONS

38	RE-IGNITION BLOCKING TIME	min.	05
39	ASPIRATION FAN MINIMUM OFF	min.	10
40	PRECHARGE IN IGNITION TIME	sec.	135
41	FLAME'S WAITING TIME	sec.	60
42	SMOKE'S SPEED IN PRECARGE	RPM	1350
43	DELTA T STAND-BY	°C	02
44	DELAY STAND-BY	min.	10
45	CHARGE OF POWER	sec.	20
46	ENABLE REMOTE	on/off	**
47	ENABLE KEYLOCK	on/off	off
48	BLACK-OUT	sec.	20